


**Experience Netflix Remote—Standard Video Service only**  
URC2135

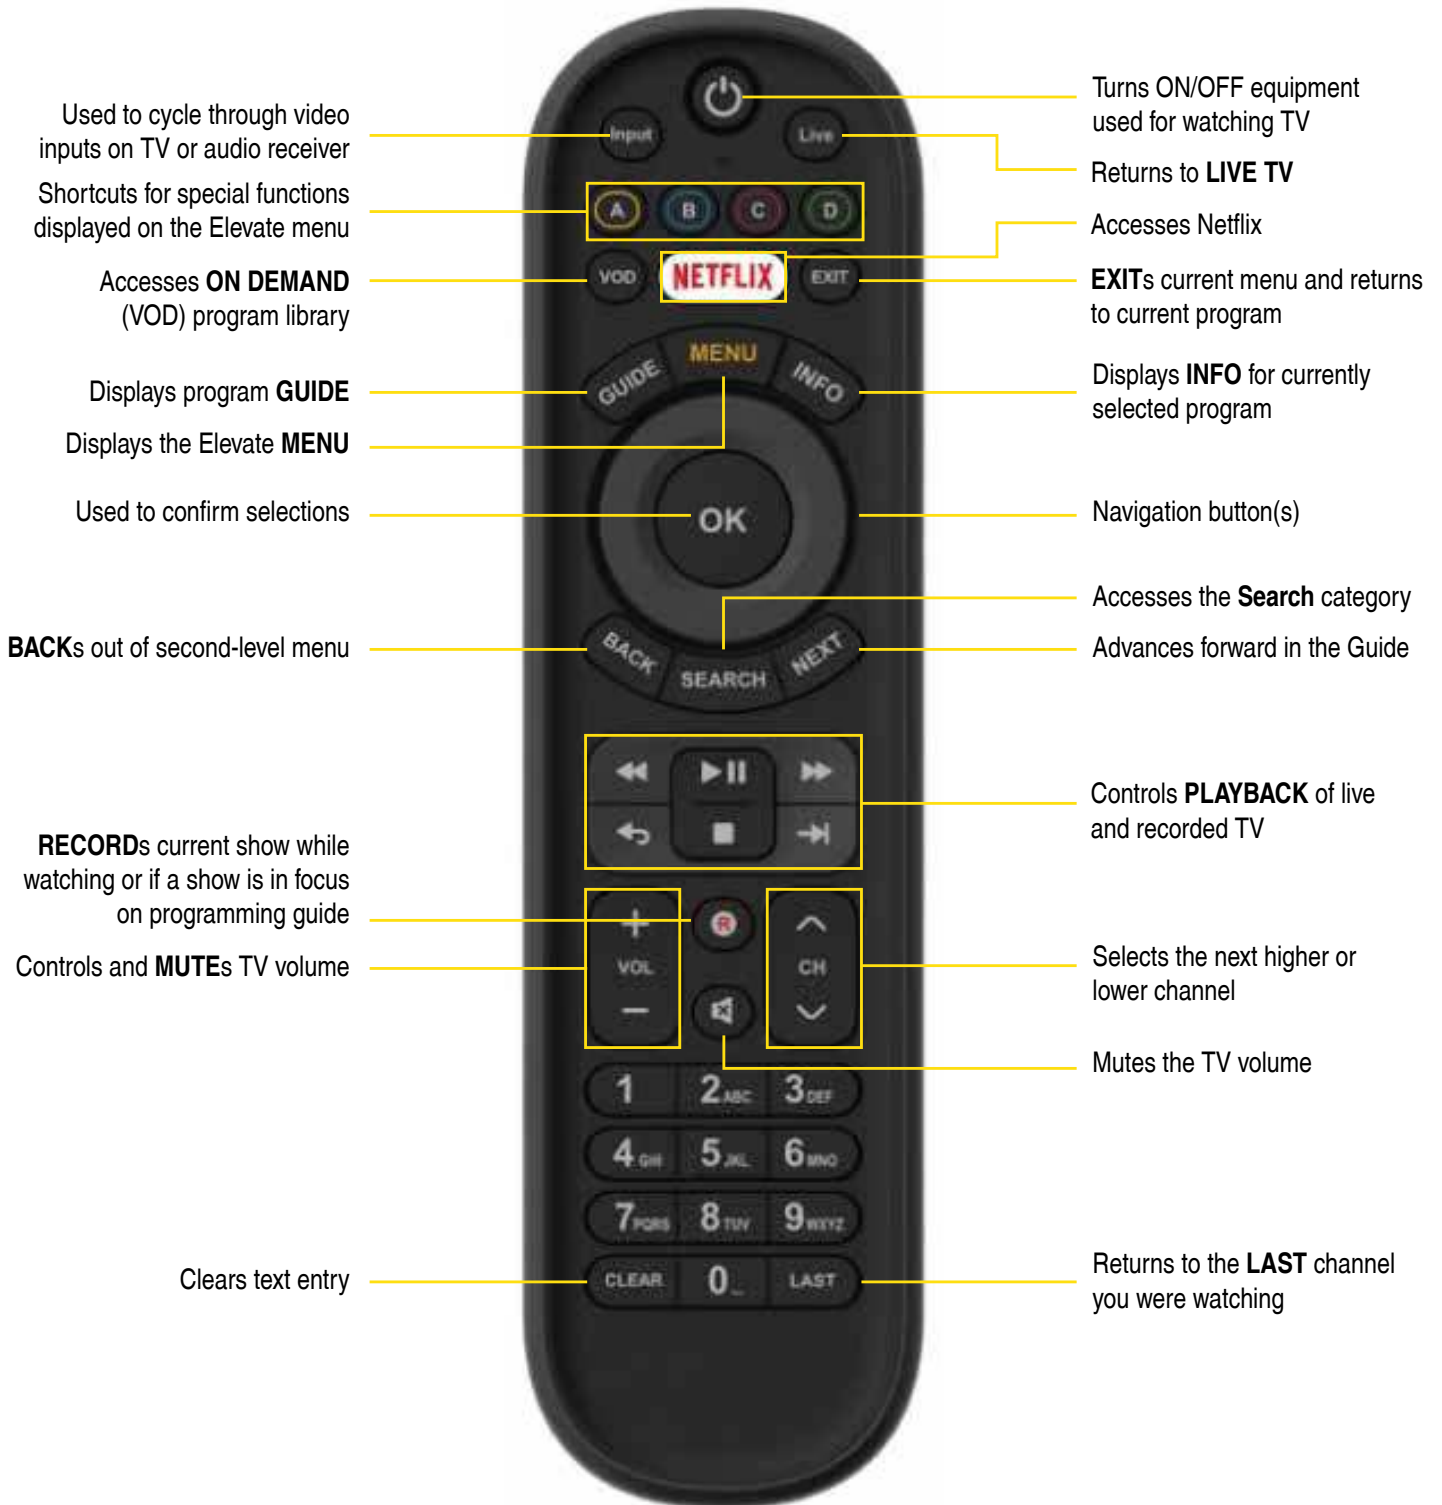

### There are Three ways you can Program your Remote:

- Program your remote using the Popular Brands Method.
- Program your remote using the Direct Code Entry Method.
- Program your remote using the Code Search Method.

#### Popular Brands Method

1. Turn on all of the devices that you wish to control.
2. Press and hold **OK** (●) and **MUTE** (🔇) until the **POWER** (⏻) button blinks twice.
3. Press **A** (●) (yellow) for TV or **B** (●) (blue) for audio device. The **POWER** (⏻) button stays lit.
4. Find your device and brand from the charts below and note the **Digit** button assigned to your brand.
5. Press and hold down the **Digit** button for your device/brand.

TV			
Digit	Brand	Digit	Brand
1	Insignia/Dynex	6	Samsung
2	LG/Zenith	7	Sharp
3	Mitsubishi	8	Sony
4	Panasonic	9	Toshiba
5	Philips/Magnavox	0	Vizion

Audio			
Digit	Brand	Digit	Brand
1	Bose	6	Philips
2	Denon	7	Pioneer
3	LG	8	Samsung
4	Onkyo	9	Sony
5	Panasonic	0	Yamaha

- If your brand does not appear in the brand chart, perform set up using either **Direct Code Entry** or **Code Search**.

6. Let go of the key when your device turns off. Setup for that device is complete.

- If the **POWER** button blinks 2 times, you have successfully programmed your device. If the **POWER** button has 1 long blink, your device did not program.

#### Direct Code Entry Method - TV

1. Press **A** (●) (yellow) button.
2. Press and hold **OK** (●) and **MUTE** (🔇) until the **POWER** (⏻) button blinks twice.
3. Enter the first TV code for your TV brand from the code list.
4. Press the **POWER** (⏻) button to test TV control.

- If the TV turns off, setup is complete. If the TV does not turn off, repeat process using the next code for your TV brand.

TV Setup code Number

#### Direct Code Entry Method - Audio

1. Press **B** (●) (blue) button.
2. Press and hold **OK** (●) and **MUTE** (🔇) until the **POWER** (⏻) button blinks twice.
3. Enter the first audio code for your audio brand from the code list.
4. Press the **POWER** (⏻) button to test audio control.

- If the device turns off, setup is complete. If the device does not turn off, repeat process using the next code for your audio device brand.

Audio Setup code Number

#### Code Search Method

1. Press and hold **OK** (●) and **MUTE** (🔇) until the **POWER** (⏻) button blinks twice.
2. Press **A** (●) (yellow) for TV or **B** (●) (blue) for audio device. The **POWER** (⏻) button stays lit.
3. Press and hold down the **OK** (●) button.
4. Let go of the **OK** (●) button when your device turns off.

To find the exact code for your device, use the CODE FINDER feature at [www.urcsupport.com](http://www.urcsupport.com).

#### Setting Volume Controls

1. Press and hold **OK** (●) and **MUTE** (🔇) until the **POWER** (⏻) button blinks twice.
2. Press the **VOL +** (⏮) button.
3. Press **A** (●) (yellow) for TV or **B** (●) (blue) for audio device.

- Volume functions default to control the TV. Follow the above steps if you wish to use an audio device for volume control.



### Locking Input Switch to one Device

1. Press and hold **OK** (power) and **MUTE** (mute) until the **POWER** (power) button blinks twice.
2. Press the **Input** (input) button.
3. Press **A** (yellow) for TV or **B** (blue) for audio device.

### Setting Master POWER Button

1. Press and hold **OK** (power) and **MUTE** (mute) until the **POWER** (power) button blinks twice.
  2. Press the **POWER** (power) button.
  3. Press the letter button that corresponds to each device you wish to turn on when watching cable TV. ( i.e. **A** (yellow) for TV or **B** (blue) for audio device.)
  4. Press and hold **MUTE** (mute) until the **POWER** (power) button blinks twice.
- Pressing the **POWER** button turns your home theater equipment ON or OFF.

### Troubleshooting

**Problem:** POWER button does not blink when button is pressed.

**Solution:** Replace batteries.

**Problem:** POWER button blinks, but remote does not control my equipment.

**Solution:** Press correct button and point remote at equipment you need to control.

**Problem:** Tried all codes for my brand of device and none work.

**Solution:** Try CODE SEARCH Method or go to [www.urcsupport.com](http://www.urcsupport.com) for model-based search.

**Problem:** I want to switch VOLUME LOCK from AUD to TV control.

**Solution:** Follow Setting Volume Controls instructions above, but press TV mode button instead of AUD mode button.

## EXPERIENCE NETFLIX CODES

### AUDIO - AMPLIFIER

DENON 2706, 2134  
 DURABRAND 1568  
 HALCRO 1934  
 HARMAN/KARDON 0892, 3045  
 LEFT COAST 0892  
 LEFT COAST PRODUCTS 0892  
 MARANTZ 2138, 0892, 1892  
 MEMOREX 1568  
 OPTIMUS 0823  
 PARASOUND 1934  
 PHILIPS 0892  
 PIONEER 0823  
 POLK AUDIO 0892  
 RCA 0823  
 REGENT 1568  
 SONY 3903

### AUDIO - ACCESSORY

AUDIO SOLUTIONS 3622  
 AUDIOSOURCE 3721  
 CURTIS 3942  
 DEFINITIVE TECHNOLOGY 3645  
 DENON 2502  
 DYNAVOX 3231  
 HAIER 3516  
 HARMAN/KARDON 3756, 3517  
 ILIVE 3175  
 INSIGNIA 3951  
 JBL 3756, 3535  
 JVC 3049  
 KLIPSCH 3915  
 LG 3217  
 MARTIN LOGAN 3526  
 ONKYO 3326  
 PANASONIC 3409, 3767  
 PHILIPS 3962, 3282, 2675  
 PINNACLE SPEAKERS 3774, 3728  
 PIONEER 3956  
 POLK AUDIO 3429  
 PROFICIENT 3661  
 SAMSUNG 2660  
 SHARP 3736, 3097  
 SONOS 3919  
 SONY 2610  
 SPEAKERCRAFT 3661  
 TOSHIBA 3627  
 VIZIO 2454  
 YAMAHA 2116, 3917, 2021  
 ZVOX 2332, 3913, 2334

### AUDIO - RECEIVER CODES

AIWA 0121, 1641, 0158, 0189, 1089  
 ALCO 1390  
 AMC 1077  
 ANAM 1609  
 ANTHEM 3294  
 ANTHEM STATEMENT 3294  
 APEX DIGITAL 1257

ARCAM 1189, 0189  
 AUDIOTRONIC 1189  
 AUDIOVOX 1390  
 BOSE 1933, 1629, 3959, 1229, 1357  
 CARVER 0189, 0121, 1089, 1189  
 COBY 1389, 2748, 2698, 3218  
 CURTIS 1389  
 DENON 2857, 1360, 2516, 3347,  
 1460, 2820, 3380, 2279, 3001  
 DYNEX 2971  
 EPWORTH 0121, 1641, 0158, 0189,  
 1089  
 FISHER 1801  
 GARRARD 0463  
 GATEWAY 1567, 1517  
 GE 3297  
 GENERAL ELECTRIC 3297  
 GO VIDEO 1295  
 GPX 3214  
 HARMAN/KARDON 2241, 0110,  
 1304, 2443, 3418, 0891, 0189, 2670,  
 1306  
 HITACHI 1801  
 INSIGNIA 2175, 1030, 2169, 2472,  
 1751, 2929, 2966, 3210, 1077, 2126  
 INTEGRA 1805, 2730, 1320, 2503,  
 0135, 1298  
 JBL 1306, 2241, 0110  
 JENSEN 1389  
 JVC 1676, 1374, 2040, 2331, 1495,  
 2239, 1871, 3115, 3274  
 KENWOOD 1570, 1313, 1293  
 KLH 1390  
 LG 2676, 2197, 2284, 3285, 1293  
 LINN 0189  
 MAGNAVOX 0189, 1089, 1269, 1189,  
 1831  
 MARANTZ 1289, 2114, 0189, 1189,  
 1089, 1269  
 MCINTOSH 1289  
 MICROMEGA 1189  
 MUSICMAGIC 1089  
 MYRYAD 1189  
 NAKAMICHI 1313  
 NEXXTECH 1751  
 NORCENT 1389, 1751  
 NOVA 1389  
 ONKYO 1805, 0135, 1320, 2730,  
 2503, 1298  
 OPTIMUS 1023  
 PANASONIC 2967, 1548, 1275, 1288,  
 1633, 2221, 2452, 3055, 3309, 1763,  
 3111, 1764, 2745, 1316, 2105, 1518,  
 1308, 1676  
 PHILCO 1390, 1831  
 PHILIPS 0189, 1831, 1269, 2459,  
 0891, 2289, 1266, 2311, 1089, 1189  
 PIONEER 1123, 1935, 1384, 2432,  
 1023, 2612  
 POLK AUDIO 1289, 0189, 2270  
 PROSCAN 1254

RCA 1254, 2041, 2611, 2655, 2719,  
 3297, 1123, 1390, 1609, 3281, 2426,  
 1023  
 RIO 1869  
 SAMSUNG 1868, 2809, 2948, 1500,  
 1295, 3154, 2137, 1304  
 SANSUI 0189, 1089  
 SANYO 1801  
 SHERWOOD 1077, 1567, 1905, 1517,  
 1653, 3120, 2169  
 SHERWOOD NEWCASTLE 1567,  
 2169  
 SONIC BLUE 1869  
 SONY 0158, 1058, 1622, 1759, 2172,  
 1441, 1822, 1758, 2475, 2522, 1258,  
 1658, 2860, 2671, 3257, 1858, 2216,  
 1558, 3372, 3456  
 STEREOPHONICS 1023  
 SUNFIRE 1313  
 TEAC 0463, 1390  
 TECHNICS 1308, 1633, 1518  
 THORENS 1189  
 TOSHIBA 1788, 1123  
 VENTURER 1390  
 WARDS 0158, 0189  
 YAMAHA 2467, 0176, 1276, 2061,  
 3580, 0376, 3030, 1815, 1376, 3267,  
 3313, 1331, 1375, 2471, 3270  
 ZENITH 1293, 2197, 1869

### TV

3M 0724  
 ACCURIAN 1803  
 ACER 1339  
 ADMIRAL 0093, 0463  
 ADVENT 0761, 1570  
 AFFINITY 3717, 3577, 3716, 3870  
 AIWA 1362  
 AKAI 0702, 1675, 0812, 1385, 1903,  
 1935, 0765  
 AMERICA ACTION 0180  
 ANAM 0180  
 ANTHEM 1633  
 ANTHEM STATEMENT 1633  
 AOC 1589, 3720, 1365, 2014, 2087,  
 2621, 1590, 2479, 3707, 1089  
 APEX DIGITAL 0765, 2397, 0748,  
 1217, 0890  
 ARIO 2397  
 ASTAR 1738, 1531  
 ASUS 3340  
 ATVIO 3636  
 AUDIOVOX 1865, 0875, 1564, 1951,  
 1868, 2413, 0846, 1958, 0180, 0802,  
 1276, 1766, 1769, 2121, 1937, 3065,  
 0451, 0623, 1803, 2513, 3410  
 AUMARK 0060  
 AURIA 2087, 2014, 2277  
 AVENTURA 0171  
 AVOL 3118  
 AXION 1937, 1958

BELL & HOWELL 0154  
 BENQ 1315  
 BERKSHIRE 0047  
 BLU:SENS 2735  
 BOXLIGHT 0724  
 BRADFORD 0180  
 BRILLIAN 1007  
 BROKSONIC 0463, 1935, 1911,  
 1892, 1938  
 CARVER 0054  
 CCE 0623  
 CELERA 0765  
 CHAMPION 1362  
 CHANGHONG 0765  
 CINEON 3951  
 CITIZEN 0060, 1935  
 CLARION 0180  
 CLARIS 3807  
 COBY 3478, 2315, 3627, 2344, 2306,  
 2314, 2345, 1634, 2338, 2326, 2340,  
 3629, 1538, 2347, 2348, 3202, 3493,  
 2560  
 COMMERCIAL SOLUTIONS 0047,  
 1447  
 CONTEC 0180  
 CONTEX 4053  
 CORNEA 3677  
 CRAIG 0180, 3423  
 CROSLEY 0054  
 CROWN 0180  
 CURTIS 2855, 3577, 2466, 3895,  
 2352, 2397, 3939, 4035, 3636, 1326,  
 1314, 2859, 3154, 3382, 3595, 3717  
 CURTIS MATHES 0060, 0451, 0702,  
 1661, 0054, 0047, 0093, 0145, 0154,  
 1347, 1959  
 CXC 0180  
 CYTRON 1326  
 DAEWOO 1661, 0623, 0451, 0661,  
 1909,  
 0154  
 DELL 1403, 1863, 1264, 2491, 1080  
 DENON 0145  
 DIGITAL LIFESTYLES 1765  
 DISNEY 1892, 1665  
 DUKANE 0724, 1398  
 DUMONT 0017  
 DURABRAND 0463, 0171, 1570,  
 1665, 0178, 0180  
 DYNEX 2049, 1463, 1785, 2184  
 ELECTROGRAPH 1755  
 ELECTROHOME 0463, 1570, 1670  
 ELECTRON 2466, 2855  
 ELEKTRA 0017, 1661  
 ELEMENT 3559, 1687, 2183, 2964,  
 3907, 1886  
 ELITE 3867  
 EMERSON 1394, 1864, 0463, 0171,  
 1963, 0180, 1913, 1886, 0178, 1944,  
 3623, 1911, 0623, 1661, 2183, 1665,  
 0451, 1909, 0154, 3559



EMPRES 1422, 1765  
ENVISION 1589, 1365, 2087, 2014, 2621  
EPSON 1290, 1122  
EPWORTH 1362  
EQD 2014, 2087, 2277  
EQD AURIA 2014, 2087, 2277  
ESA 0812, 0171, 1944, 1963, 1913  
FAVI 3382  
FISHER 0154, 1362  
FLUID 2964, 3907  
FUJITSU 0809, 0683  
FUNAI 0171, 0180, 1271, 1394, 1963, 1864, 1904  
FUTURETECH 0180  
GATEWAY 1755, 1756  
GE 0047, 0451, 1547, 1447, 1347, 0051, 0178, 0765  
GENERAL ELECTRIC 0047, 0451, 1547, 1447, 1347, 0051, 0178, 0765  
GFM 0171, 1665, 1963, 1886, 1864, 1865  
GIBRALTER 0017  
GO VIDEO 0060  
GOLDSTAR 0178  
GPX 3980, 3977, 3196, 2617  
GRUNDIG 0683  
GRUNPY 0180  
HAIER 1749, 2309, 1748, 3382, 1753, 3987, 3429, 2293, 1570, 3204  
HALLMARK 0178  
HANNSPREE 1348, 2786, 1351  
HARLEY DAVIDSON 1904  
HARMAN/KARDON 0054  
HARVARD 0180  
HAVERMY 0093  
HELIOS 0865  
HELLO KITTY 0451  
HEWLETT PACKARD 1642, 1089  
HIMITSU 0180  
HISENSE 3519, 2183, 1660, 2098, 1314, 0748, 3382  
HITACHI 1643, 0145, 1145, 0724, 1345, 3382, 0679, 2756, 1904  
HITEKER 3118  
HP 1642, 1089  
HYUNDAI 3418  
ILO 1665, 1684, 1990, 1603, 1463, 1286, 1394  
INFINITY 0054  
INFOCUS 3482  
INITIAL 1990, 1603  
INSIGNIA 2049, 1641, 1564, 1326, 1785, 1892, 2002, 1204, 1423, 1517, 0171, 0463, 1385, 1660, 1963, 2184, 2416, 2417, 2432, 2751  
INTEQ 0017  
IRIS 2189  
ISYMPHONY 3429, 3382, 3118, 3094  
JBL 0054  
JC PENNEY 0047, 0060, 1347, 0051, 0178, 0156  
JCM 2189, 2256  
JENSEN 1326, 3204, 0761, 2541  
JVC 1774, 1253, 1601, 0053, 2321, 2271, 1633, 1923, 3854, 3841, 1570, 1670, 0650, 0683, 2264, 0463, 1892  
KDS 1498, 1687  
KEC 0180  
KLH 0765  
KOLIN 1240  
KONKA 1385  
KOST 1483  
KTV 0180  
LEGEND 2397, 2309  
LG 2731, 1423, 2358, 0178, 3941, 3397, 2424, 1265, 3979, 2834, 2864, 2612, 0017  
LG ALPS 2358  
LLOYD'S 1904  
LODGINGSTAR 3147  
LXI 0154, 0047, 0156, 0178, 0017, 0054, 1347  
MAG 1687, 1498  
MAGNASONIC 1913  
MAGNAVOX 3623, 1454, 2372, 2597, 0054, 1866, 1913, 1944, 1963, 1455, 1990, 3708, 0171, 1365, 1931, 2902, 0051, 0802, 1755, 1867, 1904  
MARANTZ 0054, 1398, 0704, 1454  
MATSUSHITA 0051, 0250, 0650  
MAXENT 1755, 1757  
MB QUART 1868  
MEGATRON 0145, 0178  
MEMOREX 0463, 1911, 1570, 1670, 1938, 0178, 1892, 1665, 1785, 1903, 0060, 0150, 0154, 1687, 1924, 1927  
MGA 0150, 0178  
MICROTEK 3951  
MIDLAND 0017, 0047, 0051  
MINTEK 1603, 1990  
MISAKAI 0171  
MITSUBISHI ELECTRIC 1250, 0150, 1797, 0178, 2010, 0093  
MOTOROLA 0093  
MTC 0060  
MULTITECH 0180  
NAD 1156, 0156, 0178  
NAXA 2104, 2735, 3154, 3382, 3423  
NEC 1797, 1704, 1398, 0704, 2293  
NETTV 1755  
NEW ACOUSTIC DIMENSION 1156, 0156, 0178  
NEXUS 3519  
NEXUS ELECTRONICS 2183  
NIKKO 0178, 0017, 0047, 1347, 0154, 0156  
NORCENT 1365, 1589, 0748, 1089, 1590  
NORWOOD MICRO 1286  
NUVISION 2158  
ÖLEVIA 1610, 1240, 1331, 1144  
ONWA 0180  
OPTIMUS 0250, 1927, 1913, 1924, 0154, 0650, 0679  
OPTIQUE 2189  
OPTONICA 0093  
ORION 0463, 1911, 1463, 1938, 1892, 3540  
PANASONIC 1480, 1291, 0250, 0650, 2264, 0051, 1941, 1927, 1947, 1924, 1310, 0047, 0053, 0054, 0060, 0093, 0145, 0150, 0154, 0156, 0178, 1271, 1290, 1347  
PARK 2104  
PENNEY 0047, 0060, 1347, 0051, 0178, 0156  
PHILCO 0054, 0171, 1665, 1963, 1271, 1394  
PHILIPS 1867, 2372, 1454, 1455, 2597, 2374, 3623, 0690, 1744, 1866, 2622, 0054, 0017, 0171, 1944, 1365, 1990, 1394, 1483, 2902  
PIONEER 0679, 1260, 1457, 1398, 1633  
PLANAR 0679, 1589  
POLAROID 1523, 1769, 1498, 1276, 1538, 1385, 1767, 3942, 4035, 1687, 2121, 0765, 0865, 1314, 1766, 1286, 1326, 2002, 1524  
PORTLAND 1661, 0451  
PRIMA 1753, 1785, 0761, 1749  
PRISM 0051  
PROSCAN 0047, 1447, 3577, 3382, 2183, 2256, 3717, 3636, 3895, 4035, 3939, 1347, 2147, 4053, 2746, 3429, 3907, 3953  
PROTON 0178  
PROVIEW 1687, 1498  
PULSAR 0017  
PYLE 2196, 2641  
PYLE HOME 2196  
QUANTUMFX 3593, 2337  
QUASAR 0051, 0250, 1291, 1927, 1924, 0650  
RADIOHACK 0180, 0178, 1904, 0154, 0047  
RCA 2746, 2434, 2932, 1447, 0047, 1547, 1347, 3577, 2247, 3382, 3717, 1781, 3895, 2187, 3636, 3939, 2183, 2855, 0679, 3147, 1661, 1953, 1958, 1959, 4035, 4053, 0093, 1385, 1868, 1911, 2002, 3938, 0051, 0090, 1670, 3894  
REALISTIC 0154, 0180, 0178  
RUNCO 1398, 0017  
SAMPO 1755  
SAMSUNG 2051, 0812, 0702, 0060, 1959, 0766, 1903, 1060, 2722, 0650, 0814, 0178  
SANSUI 0463, 1892, 3540, 1911, 1670, 1935, 1463, 3564, 1938, 1409, 4053, 3377, 0171, 1904, 3559  
SANYO 1142, 0154, 0799, 1362, 1785, 1480, 0054, 0088  
SCEPTRE 2528, 2337, 1217, 1360, 0878, 1599, 2506  
SCOTCH 0178  
SCOTT 0178, 1711, 0180  
SEARS 0154, 0054, 0156, 0047, 0171, 0178, 1007, 1547, 1904  
SEIKI 3953, 2964, 3559, 3382, 3560, 0178  
SEIKO EPSON 1290, 1122  
SELECO 1351  
SENS 1749, 1865  
SHARP 0093, 2360, 0818, 1602, 3867  
SHENG CHIA 0093  
SHERWOOD 3061  
SIGMAC 3477, 3423  
SIGNATURE 0054  
SIGNATURE2000 0054  
SILO 3794, 3477  
SILO DIGITAL 3794, 3477  
SOLÉ 1483  
SONY 0810, 0834, 1300, 1685, 1904  
SOUNDESIGN 0178, 0180  
SOYO 1520  
SPECTRONIQ 1498, 1687  
SQUAREVIEW 0171  
SSS 0180  
STARLITE 0180  
SUNBRITETV 2337, 1610, 2528  
SUPERSCAN 0864, 1944, 0093, 0171  
SUPERSONIC 3593, 3154, 2104, 1753, 3595, 3204, 3894  
SVA 0748, 0865, 1963  
SYLVANIA 1864, 1886, 0171, 0054, 1963, 1944, 1913, 1394, 1665, 1271, 1314, 1931  
SYMPHONIC 0171, 1913, 1944, 1963, 1394, 0180, 1904  
SYNTAX 1610, 1240, 1144, 1331  
TANDY 0093  
TATUNG 1286, 1756  
TCL 2434, 3183  
TECHNICS 0051, 0250, 0017, 0047, 1347, 0650  
TECHWOOD 0051  
TEKNIKA 0054, 0180, 0060, 0150  
TELEFUNKEN 0702  
THOMAS 1904  
THOMAS AMERICA 1904  
TMK 0178  
TNCI 0017  
TOSHIBA 1524, 2724, 1656, 0156, 1156, 0822, 1256, 2006, 1935, 1936, 1945, 2684, 3945, 0832, 1704, 1959, 0650, 1369, 0060, 1265, 0154  
TOSHINAER 3576  
TRUTECH 1665, 1723  
TVS 0463  
US LOGIC 1286  
VENTURER 1868, 1865

VEOS 1007  
VICTOR 0053  
VIDIKRON 1398, 1633, 0054  
VIDTECH 0178  
VIEWSONIC 2014, 3706, 2087, 0724,  
0864, 1330, 1627, 1640, 1755, 2049,  
2277, 2111, 0857, 0885, 1542, 1564,  
1578, 1742, 1365  
VIORE 2352, 3382, 3118, 3429, 2104,  
3094, 1684, 3159, 3594, 3154  
VISIONQUEST 3380, 1738, 3154  
VIVITEK 1369  
VIZIO 3758, 1758, 2707, 2757, 2512,  
1756, 0864, 0885  
VUON 3418  
WARDS 0054, 0178, 0017, 0156,  
0047, 0051, 1156, 1347, 0060, 0154,  
0180  
WAYCON 0156  
WESTINGHOUSE 1712, 3579, 3382,  
0885, 1300, 1577, 2293, 3094, 3470,  
0889, 0890, 1282, 2397, 3908, 0451,  
0463, 1217  
WHITE WESTINGHOUSE 0623,  
1661, 1909, 0463, 1913  
WYSE 1365  
XOCECO 1753, 1785, 0761, 1749  
ZENITH 0017, 0178, 1145, 1265,  
1911, 1423, 0145, 2612, 1661, 2731,  
1365, 1909, 2358, 1463, 0047, 0463,  
1904